



### Hurricane Steering Wheel

Model number: VS2728

#### User Guide

The officially licensed Hurricane Steering Wheel is designed especially for PS4™ and PS3™ to give you the extra edge to beat even your toughest opponents. Built-in motors transmit vibrations from the racetrack straight into your steering wheel and give you a feel for the action (if the game you play supports vibration functions), whilst the ergonomic design provides fatigue-free comfort over long gaming sessions.

We hope you enjoy your Hurricane Steering Wheel!


#### Note:

When playing your Hurricane Steering Wheel it may be necessary to change the button configuration to suit your personal preference. The default button configuration may also differ between games. Your PS4™ recognises the Hurricane Steering Wheel as a DualShock®4 controller, not a steering wheel. Therefore to change the button configuration go into settings on your game, select DualShock®4 Wireless controller, not Steering Wheel and select Button Configuration.

#### Features and Specifications

- Vibration feedback effects for realistic racing experiences
- Rubber coated steering wheel for a perfect grip
- Gear shifter
- Suction cups for perfect stability
- Sensitivity settings to adjust settings to your personal driving style
- 270 degree rotation
- Auto-centering function
- 2-axis Directional Pad
- Includes foot pedals

#### Button Layout

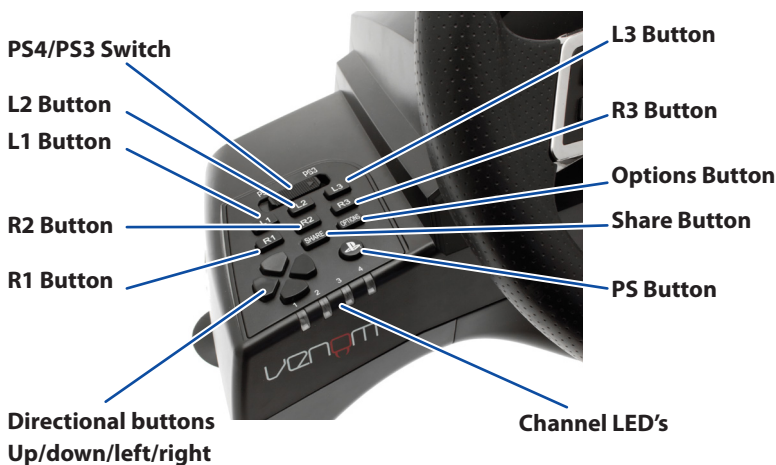

#### Wheel Sensitivity:

Please select a wheel sensitivity that suits your racing style. You may choose between Low (default), Mid, and High.

Press and hold the "L-WING", "R-WING" and "▲" buttons simultaneously to change the sensitivity settings, please hold until the RED LED light (above the Venom Logo) flashes.



#### Connection and Installation with PlayStation®3:

- Connect the pedals to the wheel.
- Turn the switch to PS3™ and plug the wheel cable into the USB port of your PS3™ System. Switch on your PS3™.
- Channel LEDs will be ON when the wheel is connected.
- Once your PS3™ is connected you may start the game or change the settings of your game or system.

#### Operating Methods

- Channel LED's start flashing when the wheel is connected. Press the "PS" button to select a channel. The LED of the operating channel will be on when a channel is selected.
- Press the "PS" button to enter the XMB™ menu interface when playing PS3™ games. Press the "PS" button again to quit. Press the PS button twice quickly to enter each main settings menu.
- 4 LED's represent the operating channels: LED 1 to 4 represent channels 1 to 4 respectively. LED1+LED4 represent channel 5. LED2+LED4 represent channel 6, LED3+LED4 represent channel 7.

For PS3™ games, the foot pedals can be assigned to:

- L-Pedal: □ button or L2 button
- R-Pedal: X button or R2 button
- Press the SHARE and OPTIONS buttons together for one second to change the controls layout.

NOTE: Each time you unplug the wheel cable from the system or restart the system, you need to press the "PS" button to select a channel for standard operation.

#### Connection and Installation with PlayStation®4:

- Turn the switch to PS4™ and connect the pedals to the wheel.
- Plug the wheel cable into the USB port of your PS4™ console. Switch on your PS4™.
- Press the "PS" button to select a channel. Channel LED1 is ON.
- Once your PS4™ is connected you may start the game or change the settings of your game or system.

#### Operating Methods

- Connect the pedals to the wheel.
- Press the "PS" button to enter the PS4™ system menu when playing PS4™ games.
- Press the "PS" button twice quickly to switch between applications in use.
- Hold down the "PS" button to close an application, log out or turn off the PS4™ system.

#### Button Configuration

When using your Hurricane Steering Wheel it may be necessary to change the button configuration to suit your personal preference. The default button configuration may also differ between games. Your PS4™ recognises the Hurricane Steering Wheel as a DualShock®4 controller, not a steering wheel. Therefore to change the button configuration go into settings on your game, select DualShock®4 Wireless controller, not Steering Wheel and select Button Configuration.

#### Firmware Update

- Download Firmware and an update program from:  
<http://ps4wheel.asian-games.com.tw>
- Install the update program (HJC32F1200\_ISP\_V14\_Setup.exe)
- Run HJC32F1200\_ISP\_V14
- Connect the steering wheel to the PC USB port
- Press "Load File" and select "firmware" (update.bin)
- Press "Run" to update.
- When it shows "ISP OK" this means that the firmware update is complete.

## Mode Change

- Choose between two modes : Gamepad mode (default) and Gaming Wheel mode
- Press "L-WING" "R-WING" and "O" keys for one second at the same time. LED1 will then turn off. Press the "PS" button to switch to "Gaming Wheel" mode, LED2 will then turn ON.

Please note: 'Need for Speed Rivals' only supports Gamepad mode. 'Drive Club' supports both "Gamepad" & "Gaming Wheel" mode (for best results use Gaming Wheel mode).

PS4™ is a registered trademark or trademark of Sony®.

## Care and Maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to protect your warranty coverage:

- Keep your device out of the reach of small children.
- Keep the device dry. Precipitation, humidity and all types of liquid or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas, as moving parts and electronic components of your device can be damaged.
- Do not use or store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not use or store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the device. All of the previous suggestions apply equally to your device, battery, charger or any enhancements.
- The crossed out wheelie bin symbol on the product means that under the WEEE regulations, all consumer and household electrical and electronic products should not be mixed with general household waste as it may contain environmentally hazardous substances. For environmentally responsible recovery, recycling and treatment of the product, contact your local authority for details of your nearest designated collection point where it will be accepted free of charge.

## Warranty:

This product is guaranteed by Venom Ltd for a period of 2 years from the date of purchase. During this period if there is a defect due to faulty materials or workmanship, the retailer from whom you purchased it will replace it with the same or a similar model on production of your purchase receipt or proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

## Helpline Information:

The helpline is a one-to-one live service.

Hours: 9.00am - 5.00pm Monday to Thursday  
9.00am - 4.30pm Friday

Tel: +44 (0) 1763 284181

Email: [customerservice@venomuk.com](mailto:customerservice@venomuk.com)

Website: [www.venomuk.com](http://www.venomuk.com)

To ensure that your call is handled quickly and efficiently please check that you have the model number VS2728 and any other relevant information regarding your product at the time of your call.

**VENOM**  
**Take Control**

Manufactured by Asian Games Corporation.  
Venom Ltd. Solution House, Sandon Road, Therfield, Hertfordshire SG8 9RE.  
Venom is a trademark of Venom Ltd.  
[www.venomuk.com](http://www.venomuk.com)

For use exclusively with PlayStation®4 and PlayStation®3 in PAL markets.  
"PS" "PlayStation", "PS3" and "PS4" are registered trademarks of Sony Computer Entertainment Inc. Also "PS4" is a trademark of the same company. All rights reserved.

