



Hurricane Steering Wheel For use with PS4™

When playing your Hurricane Steering Wheel it may be necessary to change the button configuration to suit your personal preference. The default button configuration may also differ between games. Your PS4™ recognises the Hurricane Steering Wheel as a DualShock®4 controller, not a steering wheel. Therefore to change the button configuration go into settings on your game, select DualShock®4 Wireless controller, not Steering Wheel and select Button Configuration.

www.venomuk.com

customerservice@venomuk.com